

# RT/RD4 STAINLESS STEEL

## TELESCOPIC BOLLARD

### OPERATING INSTRUCTIONS TO LOCK

Lift lid, draw up inner post to full extent.

Rotate handle clockwise quarter turn.

Press down push button lock.

### TO UNLOCK

Release push button lock with key.  
Remove key.

Rotate handle anticlockwise quarter turn.

Lower post in controlled manner.  
Do not allow it to free fall down into base.

### CONTENTS

#### TELESCOPIC UNIT

- 2 KEYS
- INSTALLATION INSTRUCTIONS

#### Installation steps.

- Open product.
- Remove keys (keep safe)
- Plan spacing.
- Follow instructions on reverse.
- Leave 24 hours
- Use telescopic bollard.
- Weekly maintenance and clean for prolonged life.

#### Stainless Steel Cleaning.

Stainless steel finishes should be cleaned as required, but at least every six months, using Stainless Steel Polish with a lint free cloth.

Hose down & wipe with mild detergent and / or warm soapy water. No other cleaner should be required at this stage, subject to environmental conditions and specific areas of heavy soiling or damage.

Key Number:

Quality inspected  
by:-



# RT/RD4 SS


COLOUR  
CODE:

**Brushed satin**

XX-INS-00010

Rev. A – 09.05.12

# RT/RD4 STAINLESS STEEL INSTALLATION INSTRUCTIONS

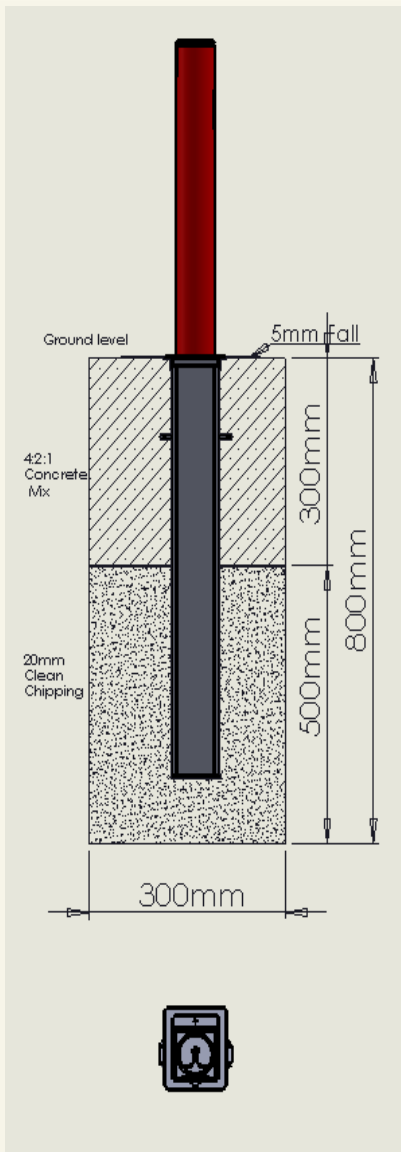

## Installation:

- Lift lid & remove keys as Picture 1.
- Determine position of installation. (recommended distance between centres: 1250mm to 1400mm maximum.)
- Break surface and bore hole 800mm deep by 300mm wide
- Fill hole with approx. 100mm of suitable aggregate (eg.20mm stone for drainage).
- NB Do not put concrete around base of bollard.**
- Lower socket into hole and check height until lid 5mm above ground.
- Add/remove aggregate until desired height is obtained.
- Position socket central in hole and add more aggregate until post stands unaided.
- Raise post and manoeuvre into vertical position using spirit level.
- Add more aggregate until 300mm from surface.
- Fill remainder of hole with 4:2:1 concrete mix and smooth off neatly to lid surround leaving slight fall away. (groundwork's depending on site conditions)
- Finally check again using spirit level and lower post gently into ground and lock.
- Leave 24 hours before use.
- Keep clean during fitting procedure.
- When lowering post do so in a controlled manner. **Do not drop.**



Picture 1

Picture 2



## Maintenance:

- Keep sliding post clean.
- Flush out & lubricate lock weekly with WD40 or similar .(Picture 2)
- Always close cover plate after use.

Failure to comply with these instructions may cause malfunction of the post & invalidation of your warranty.  
Please adhere to them. Keep installation instructions in a safe place.